


ROAD BIKE BAG PRO INSTRUCTION MANUAL

ENCLOSED PARTS ROAD BIKE BAG PRO



2 x TUBE STICKS

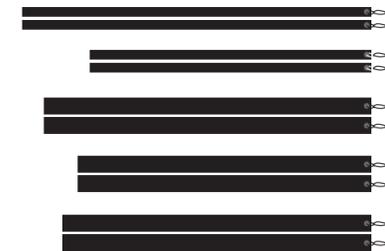


10 x STABILIZER STICKS WITH COLOURED PULL-CORD




4 x WEBBING LOOPS



1 x CLIP-ON WHEEL

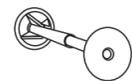

1 x SIDE IMPACT ABSORBER

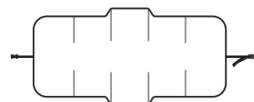


1 x COCKPIT PAD

TOOLS NEEDED



ALLEN KEY




PEDAL WRENCH

V08KLU/01-25

ENCLOSED PARTS BIKE STAND



2 x ALUMINIUM RAILS

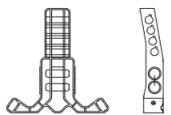

2 x HUBS

ENCLOSED PARTS BIKE STAND

10x LOWER AXLE ADAPTERS:



2 x QR 5 mm



2 x Thru axle 12 mm

UPPER AXLE ADAPTERS:



5 x 130 mm



5 x 100 mm



12 x 142 mm




12 x 100 mm




12 x 135 mm

ENCLOSED PARTS WHEEL BAGS

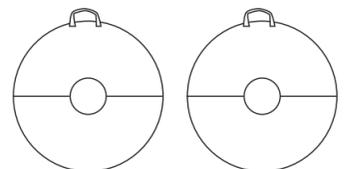


2 x WHEEL BAGS

ROAD BIKE BAG PRO

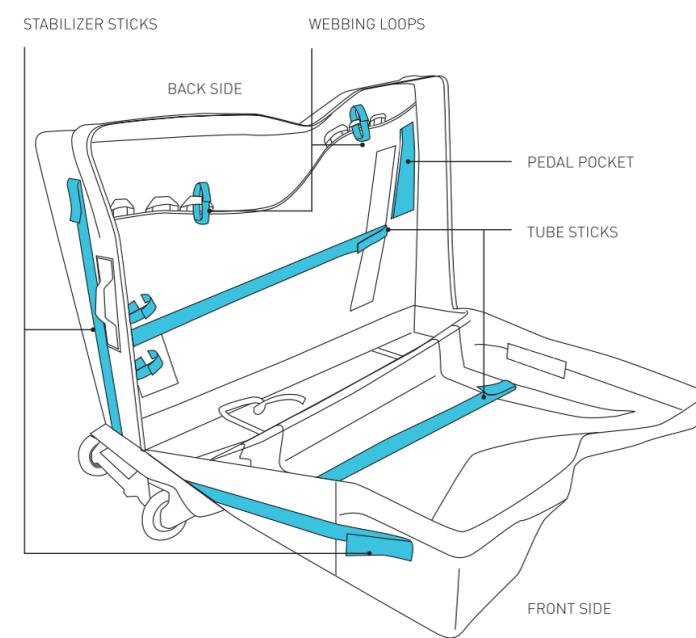

ROAD BIKE STAND

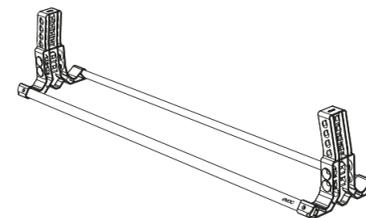


WATCH THE INSTRUCTION VIDEO




INSTRUCTION VIDEO
ROAD BIKE BAG PRO

HOW TO ASSEMBLE YOUR ROAD BIKE BAG PRO

// 01

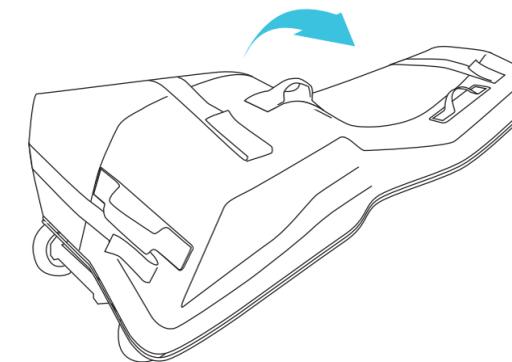


// 02

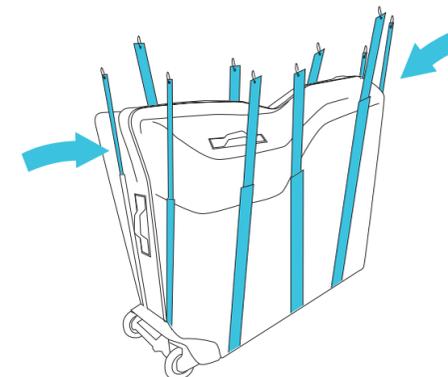

insert all 10 stabilizer sticks on all sides. colour of pull cord should match webbing colour at entry of webbing hose.


HOW TO OPEN YOUR ROAD BIKE BAG PRO

// 03

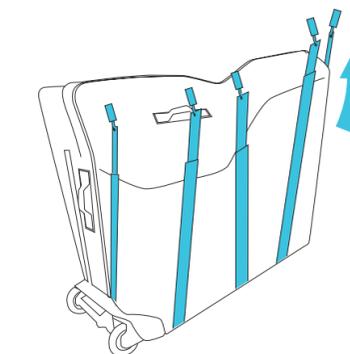


To open your ROAD BIKE BAG PRO pull the stabilizer sticks with pull-tag out 1/3 of their length. **IMPORTANT: If you don't pull out the sticks far enough, you will not be able to open your bag properly.**

HOW TO ASSEMBLE YOUR ROAD BIKE STAND

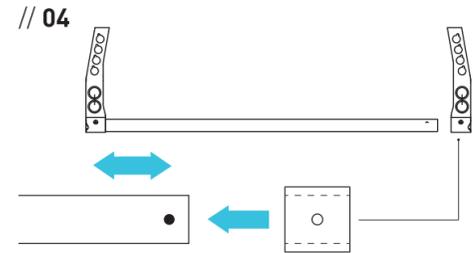


BIKE PREPARATION

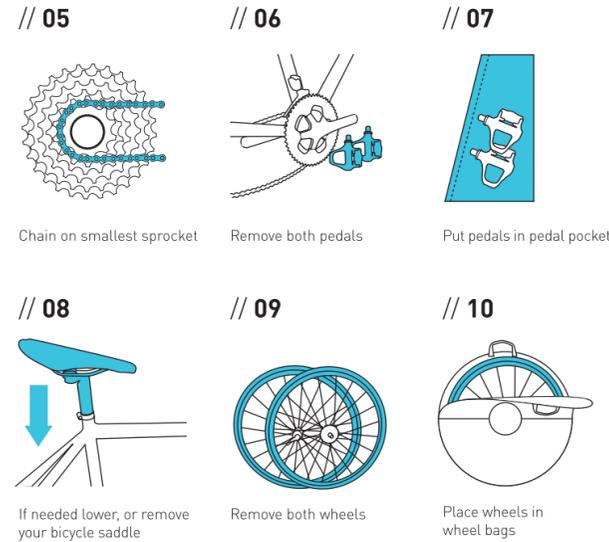

MOUNTING YOUR BIKE ON ROAD BIKE STAND




Place fork on front hub with correct front axle adapters. Tighten your front axle.

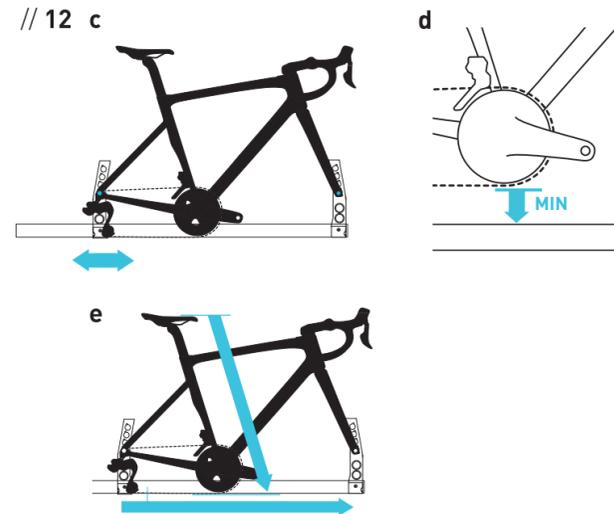


c) Adjust position of rear hub according to your wheel base. Place rear drop-outs on rear hub with correct rear axle adapter. Tighten your rear axle.
d) Always choose lowest possible level at rear hub according to chain wheel size.
e) Maximum length from seat top to bottom of chainring is 86cm. Maximum wheel base is 112cm. Maximum width of handle bar 50cm.

FIX COCKPIT PAD


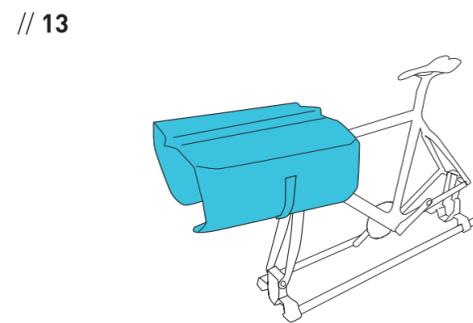


PLACE YOUR BIKE AND WHEEL BAGS

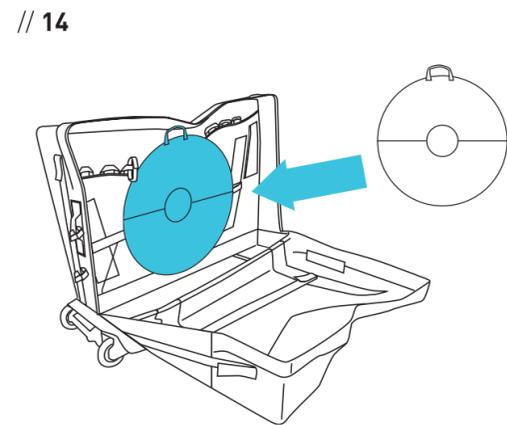


Place your bike and WHEEL BAGS in your ROAD BIKE BAG PRO (one WHEEL BAG behind and one in front of your bike)


// 15

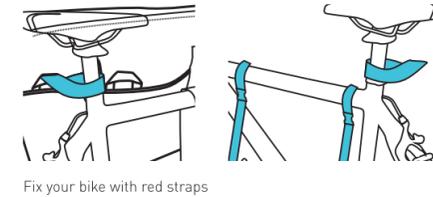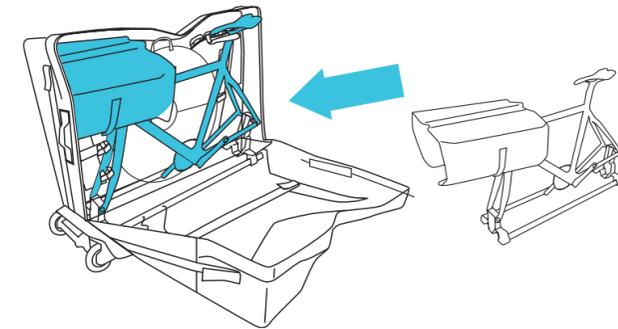


// 16

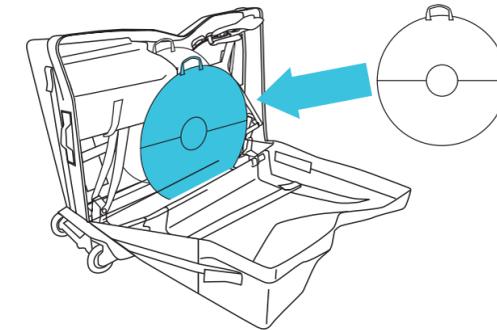

LOOKS LIKE THIS? ALMOST DONE!

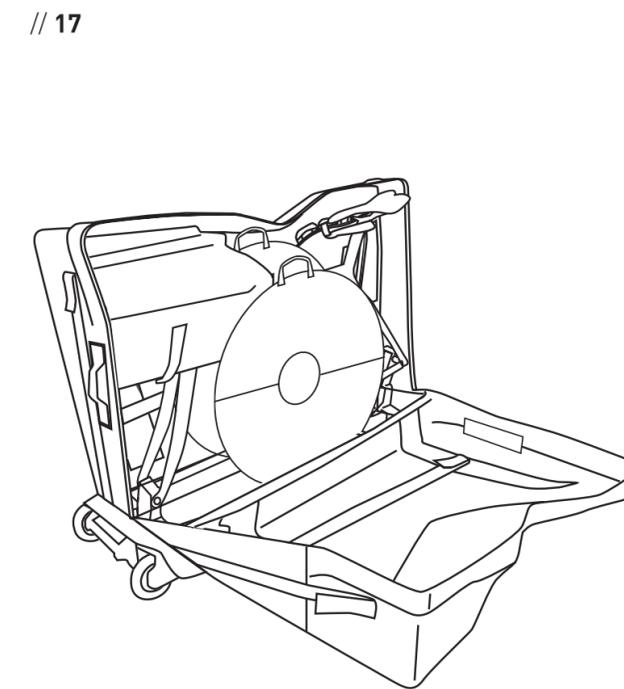


ATTACH SIDE IMPACT ABSORBER

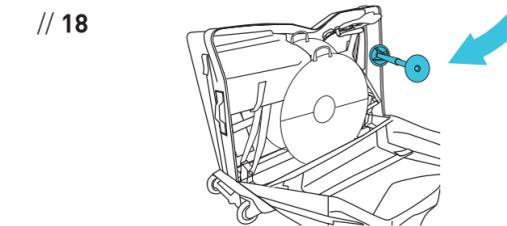

Attach SIDE IMPACT ABSORBER using the velcro strips inside your ROAD BIKE BAG PRO. Adjust the length of the absorber according to the width of your bike.

HOW TO USE THE CLIP-ON WHEEL

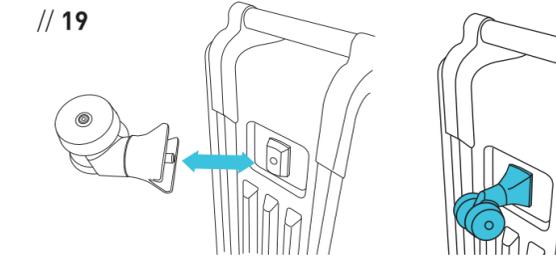

Click CLIP-ON WHEEL to counterpart on the front of bottom. Pin has to go into feed holes.
Remove CLIP-ON WHEEL before luggage drop and put back into ROAD BIKE BAG PRO!

WARRANTY AND AFTER SALES SERVICE



WARRANTY
www.evocsports.com/service/warranty